



### Thermal Block

Our SNS® Thermal Spacer "The Performer" can be installed on the go (option 1) as insulation and roof sheets are installed or they can be installed all at once (option 2), either way, works great.

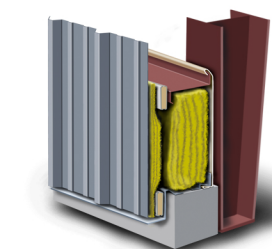

#### **Option 1**

(Screws about  
12" apart)

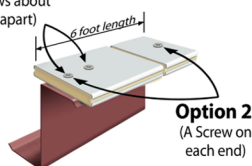

#### **Option 2**

(A Screw on  
each end)

Each Thermal Spacer comes in six-foot lengths which are the standard widths of two wall sheet panels and the typical width of a metal building insulation roll. This makes the Thermal Spacer easy to handle and install.

Each Thermal Spacer comes with two flat-head screws to hold the six-foot Thermal Spacer in place.

### Suggestions:

- When installing the Thermal Spacer, center it over the flange of the girt.
- Butt the Thermal Spacer end to end without added pressure.
- Consider the placement of the flat-head screws through the Thermal Spacer so that the SNS® panel fasteners do not conflict with the flathead screws.
- When installing the insulation blankets, install to industry standards to allow for full expansion of fiberglass.

### Step 1:


Thermal Spacers are placed over the girt and are attached by two flat head screws.

(Option 1) screw the first flathead screw at the end and the second screw around 12 inches from the first.

(Option 2) screw a flathead screw into each end of the Thermal Spacer.

### Fasteners:

Our SNS® Panel Fastener has been specifically designed to be used with SNS® Thermal Spacer, "The Performer". **Use of this fastener is mandatory as it is key to the performance of the Sealed "N" Safe® Continuous Insulation System.** If pre-drilling the sheeting, use a 1/8" drill bit to maintain the design and the performance of the fastener. Do not use any other fastener. Use of any other fastener will void all warranties.

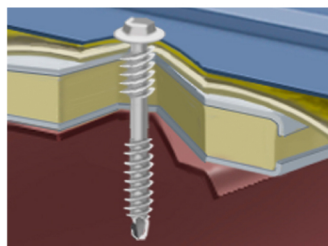

### Suggestions:

- If your wall sheet requires more SNS® Panel fasteners than are provided, additional fasteners are available at SNS
- A 6 amp 2500 rpm electric screw-gun will be needed with a depth locating nosepiece. (See fastener installation instructions)

### Step 2:

Once the insulation blanket and the wall sheets are placed over the Thermal Spacer, SNS® Panel Fasteners are placed through the wall sheet, insulation, and Thermal Spacer into the girt. The design of the panel fastener creates a "stitch-type" joint, between the wall sheet and the Thermal Spacers. This creates a water-tight seal, while fastening the whole assembly tightly to the girts. If pre-drilling the wall sheet, use a 1/8" drill bit.

The fastening process works much like a typical screw-down wall. The only additional step is to set the Thermal Spacer in place with two flat-head screws and the use of the SNS® Panel Fastener to screw down the wall sheeting.